


Please read this manual carefully. This manual applies to the Hamulight remote control Nova. The remote control is supplied complete (including 2x AAA batteries, holder and mounting material).

*This manual in your own language?
Or do you need a different variant?
Scan the QR code.*




1

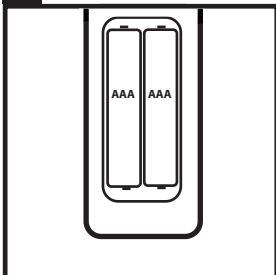

First check that all parts are present and insert both AAA batteries into the remote control. Then test whether the remote control works. Press any button and check that the LED indicator turns blue.

2

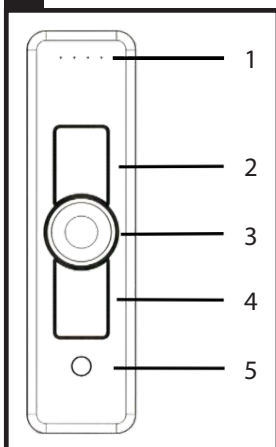

1. Channel indicator
2. On / Dim up
3. Function
4. Off / Dim down
5. Change channel

Pairing functions

If you received the remote control in a veranda set (incl. LED spots and transformer), the remote control has already been paired to the supplied transformer. If you received the remote control separately, you need to pair the remote control to the transformer. You do this by following the steps below.

Pair a new remote control

1. First select the channel
2. Connect the transformer to the power
3. Press the function key for 3 seconds immediately after to complete the pairing
4. The light will turn off (pairing completed)

Remove a remote control

1. Ensure the transformer can be controlled by the selected channel
2. Hold on + function key for 12 seconds to open a pairing window
3. The light will flash 2 times and remain on (pairing window opened)
4. The pairing window is set for 10 seconds, it closes automatically after 10 seconds
5. Press the on key 5 times quickly on the paired remote
6. The light will turn off (removal completed)

Please read this manual carefully. This manual applies to the Hamulight remote control Nova. The remote control is supplied complete (including 2x AAA batteries, holder and mounting material).

*This manual in your own language?
Or do you need a different variant?
Scan the QR code.*



3



Basic functions

^ ARROW UP

OUTDOOR CORE+	Turn on & dim up (100%)
OUTDOOR PRO+	Turn on
OUTDOOR GLOW+	Turn on & dim up (100%)
OUTDOOR FLEX+	Turn on & dim up (100%)

▼ ARROW DOWN

OUTDOOR CORE+	Turn off & dim up (100%)
OUTDOOR PRO+	Turn off
OUTDOOR GLOW+	Turn off & dim up (100%)
OUTDOOR FLEX+	Turn off & dim up (100%)

HM FUNCTION

OUTDOOR CORE+	Dimmable settings (10% - 40% - 60% - 100%)
OUTDOOR PRO+	No function
OUTDOOR GLOW+	Dimmable settings (10% - 40% - 60% - 100%)
OUTDOOR FLEX+	Color change

○ CHANNEL

OUTDOOR CORE+	Control channels
OUTDOOR PRO+	Control channels
OUTDOOR GLOW+	Control channels
OUTDOOR FLEX+	Control channels & switch between RGB and CCT