

Step-by-step programming (reading) Hamulight remote control

Step 1: disconnect the LED set from mains power.

Step 2: reconnect the LED set to mains power after 10 seconds.

Step 3: immediately press the top button of the Hamulight remote control 5 times in quick succession (see illustration). The Hamulight remote control has now been read in.

Note: If the Hamulight remote control does not function after reading in, there may be a defect. In this case, the Hamulight transformer and the Hamulight remote control should be replaced.

TOP BUTTON

